


2000 & 4000 Series

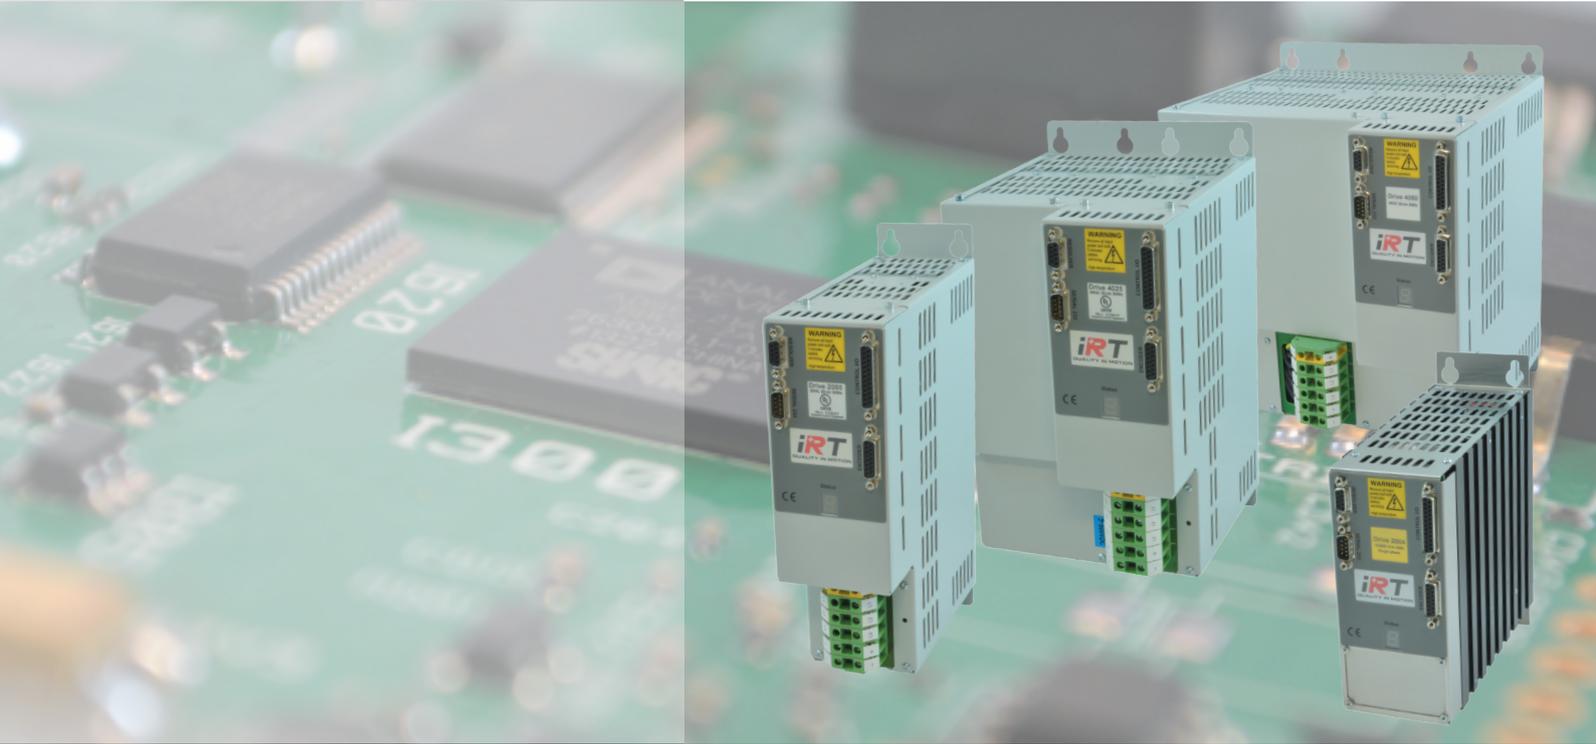

Operating Manual



Contents

CHAPTER B - USER UTILITIES	5
1. WINDOWS USERS	5
1.1 2000WU : 2000 WINDOWS USER	5
1.2 MAIN FUNCTIONS OF 2000 WINDOWS USER	6
1.3 UPDATE FIRMWARE WITH 2000WU	6
1.4 CHANGE PARAMETERS VALUES WITH 2000WU	7
2. SERIAL LINK	8
2.1 DIALOGUE PROTOCOL	8
2.2 DIALOGUE EXAMPLES	9
CHAPTER C - DRIVE PARAMETERS	10
1. PARAMETERS DESCRIPTION	10
1.1 GLOBAL LIST OF PARAMETERS	11
1.2 SCOPE PARAMETERS	19
CHAPTER D - SETTING TO WORK	20
1. WIRING	20
1.1 CABLE LENGTHS AND CROSS-SECTIONS	20
1.2 GLOBAL WIRING PLAN	21
1.3 CONTROL UNIT WIRING	22
1.3.1 XRESOLVER	23
1.3.2 XCOMMAND	24
1.3.3 XENCODER	26

1.3.4	XSERIAL 232 AND XSERIAL 485	27
1.3.5	AXIS SELECTOR	29
1.4	POWER CONNECTORS	30
1.4.1	MINI DRIVE TYPE 2004	30
1.4.2	MINI DRIVE TYPES 2006 AND 2009	30
1.4.3	XMOT CONNECTOR FOR SMALL AND MEDIUM DRIVES	31
1.4.4	DETERMINING THE MOTOR PHASES (WITHOUT DRIVE)	32
2.	DISPLAY INDICATIONS	33
2.1	ALARMS	34
2.2	WARNINGS	34
3.	PARAMETERS SETTINGS	35
3.1	MOTOR PARAMETERS	35
3.1.1	EXAMPLE OF MOTOR PARAMETERS	37
3.2	INSTALLATION PARAMETERS	39
3.2.1	ENCODER CONFIGURATION	39
3.2.2	END-SWITCH CONFIGURATION	41
3.2.3	SSI CONFIGURATION (OPTION)	41
3.2.4	GENERAL CONFIGURATION	42
3.3	REGULATION PARAMETERS	44
3.3.1	CONFIGURATION	44
3.3.2	CURRENT LOOP	45
3.3.3	SPEED LOOP	47
4.	HOW TO SET THE PARAMETERS	49
4.1	HOW TO SET THE RESOLVER SHIFT ANGLE PARAMETER	50
4.1.1	PROCEDURE USING THE MOTOR SETUP TOOL FROM WINDOWS USER	50
4.1.2	PROCEDURE FOR MANUAL SETTING	50
4.2	HOW TO SET THE CURRENT LOOP PARAMETERS	52
4.3	HOW TO SET THE SPEED LOOP PARAMETERS	54
5.	TROUBLE SHOOTING	57

CHAPTER E - ASYNCHRONOUS MOTOR	59
1. CHANGE OF MOTOR AND FEEDBACK TYPE	59
2. SPECIAL PARAMETERS FOR ASYNCHRONOUS MOTORS	60
2.1 FIELD WEAKENING	60
2.2 ASYNCHRONOUS ALARM	60
2.3 FEEDBACK TYPE	61
2.3.1 RESOLVER FEEDBACK	61
2.3.2 ENCODER FEEDBACK	61

CHAPTER B - USER UTILITIES

This section of the manual describes the use of customer utilities. The software is for PC compatible computer.

1. Windows Users

The Windows user software runs under Windows XP or later. This software regroups all functions of the old DOS programs and advanced functions such as integrated scope (if the firmware includes this function).

1.1 2000WU : 2000 Windows User

Like many Windows applications, this software must be installed by starting the SETUP.EXE file, delivered on the installation disk (the SETUP can be executed from the file menu or from the file manager). This operation installs all libraries needed and the application icons.

Installation problems :

1) Installation message :

COMMDLG is in use. Please close all applications and re-attempt Setup.

Solution :

Choose Ignore

Using 2000WU

A double click on the  icon starts the application.

Much information are included in the help file, it can be called by the menu « Help » or by a strike of F1 KEY anywhere in the software, to obtain help on the current opened window.

1.2 Main functions of 2000 Windows user



Monitor utility to update the firmware



Parameters viewing and setting



Alarms and status view



Scope function for displaying and printing two different channels (speed, current , resolver signal , ..)



Command generator able to create different condition of command (step, impulse, periodical function, ..)

The pictures are the toolbar's icons, which start these different functions.

1.3 Update firmware with 2000WU

Connect RS232 Drive connector to the COM1 of the computer with a AT-Link cable. Verify that the axis selector is on 0.

Start the application with a double click on it's icon.

- If « *Drive Offline* » indication appears in the toolbar, the drive is not connected at the serial port COM1, then check the connection and if necessary, change the serial port by starting « *Serial link..* » in the menu « *Configuration* ». To check the connection again, start « *Drive information..* » in the « *Utilities* » menu.
- If « *COM1 already used* » message appears, the serial port COM1 is already used by a driver (maybe the mouse driver). In this case « *Serial link* » window appears automatically and it is possible to change the serial port (COM1, COM2, COM3 or COM4, the configuration is saved for a next start of the application when the « *Close* » button is clicked) .

If the drive is correctly connected, the drive type appears below *DRIVE* in the grey box at the right of the toolbar. To uploading, click on the  icon included in the toolbar. Message *WAITING FOR DRIVE RESPONSE* appears, and if the drive is correctly connected, it disappears after a few seconds. Then, a click on the *SEARCH FILE* button enable the search of the update file (i.e. IRT2007.HEX) in the system (on the hard disk or on a disk). After selection of the file a click on the *TRANSFER PROGRAM INTO DRIVE* button start the update of the firmware or a click on the *COMPARE WITH DRIVE CONTENTS* button enable the check of the FLASH memory contents.

1.4 Change parameters values with 2000WU

Similarly to the firmware update, the Drive must be ONLINE, if not, read the first part of the firmware update procedure.

Click on the  icon to start the *DRIVE PARAMETERS UTILITY* window. it is now possible to read or write parameters values.

The values are given in three different numbers; decimal value, hexadecimal value and meaning value. The decimal and the hexadecimal value are the real internal value of the drive (16 bit), and the meaning is a corrected value with a unit. Only a few parameters have a meaning value. For the others, meaning value is the same as the decimal value, without unit.

To change parameter value, use the scroll bar to move the grid on the parameter, click on the value that you want to modify, edit it and strike ENTER key.

There are three possibilities to write the value :

- Decimal (i.e. : 15567 or -23203)
- Hexadecimal (i.e. : (800)h)
- Meaning value(i.e. : 8 A or 8)

When the ENTER key is pressed, the value is sent to the drive and is read again for checking the modification.

A click on the *SAVE PARAMETERS IN DRIVE* button stores all parameters in the FLASH memory of the drive.

2. Serial Link

2.1 Dialogue protocol

This protocol is used to exchange data between computer or CNC and one axis (RS232, min 3 wires) or several axes (max. 15, RS485, 5 wires in parallel).

In RS485, all axes are listening, while answer is given only by concerned axis, other transmitters being in tristate

Orders format :

<STX><ADDRESS><COMMAND><PARAM1><PARAM2><PARAMn><ETX><BCC>

Explications :

<STX> Start of text.

<ADDRESS> Axis address.
The address is given in ASCII (address + 48)

<COMMAND> Command to execute.

<PARAM1> Address parameter or command complement.
For the address, address value + 48..

<PARAM2..n> Optional parameters.
If data, 4 digits hexadecimal value.

<ETX> End of text.

<BCC> : Block check 8 bit
<STX > XOR <ADRESS> XORXOR <ETX>

Commands list:

Read parameter	"R"	address
Write parameter	"W"	address + parameter
Reset hardware	"CH"	
Store in FLASH	"ST"	

Answers format :

<STX><ADDRESS><COMMAND><PARAM1><PARAM2><PARAMn><ETX><BCC>
 or
 <ACK>
 or
 <NAK>

The answers are different depending on received command :

Write parameter :

Command : No Axis Write Address Data

Answer : ACK if order understood and executed
 NAK if BCC wrong and No Axis OK

Read parameter :

Command : No Axis Read Address

Answer : No Axis Read Address Data
 NAK if BCC wrong and No Axis OK

2.2 Dialogue examples

Command	Drive answer
Read parameter no 11 axis no 2 {02}{50}{82}{59}{03}{90}	Parameter no 11 = 27 = (1B)h {02}{50}{82}{59}{48}{48}{49}{66}{03}{41}
Write 127 the parameter no 28 of axis no 13 {02}{61}{87}{76}{48}{48}{55}{70}{03}{86}	ACK {06}
Store parameters in FLASH of axis no 2 {02}{50}{83}{84}{03}{52}	Nothing

CHAPTER C - DRIVE PARAMETERS

1. Parameters description

The 208 parameters of the drive are divided as follows :

Parameter address	Description	Access
0..5	Motor parameters.	Read/write Parameters
6..40	Installation parameters.	
41..45	Scope parameters.	
48..53	Command parameters.	
60..63	Internal register (for tests,..).	
64..95	Status parameters.	Read only parameters
100..179	Scope values.	
180..207	Diverse parameters	

For a few read/write parameters, a change of the value by a write order isn't directly considered. An indication is given in the « ST. » column for the read/write parameters :

- **C** : compute order must be sent to the drive to consider the change of the parameter (only for SSI)
- **S** : « Store parameters in FLASH » must be sent to the drive, for it to consider the change.
- **Nothing**: the change is directly considered.

Other abbreviations :

- **R/W** : read/write parameter.
- **R** : read only parameter.
- **O** : optional parameter (depend of firmware)
- **n.i** : parameter not included at this time.
- **RPM** : round per minute (speed units)

Important :

When VXXX→ (i.e. V2005→) is indicated in the table, the function is only available with specified firmware version (i.e. version 2005) or higher version.

1.1 Global list of parameters

Addr.	St.	R/W	Unit	Limits	Description	Example	Detail
0	S	R/W	-	1..6	Pair of motor poles		pg 35
1		R/W	$1/2^{16}$ turns	8000h..7FFFh	Resolver shift angle	16384 \Leftrightarrow ¼ turn	pg 35
2	S	R/W	-	0,1	Motor Thermostat n/o or n/c		pg 35
3		R/W	$\frac{1}{7FFF_h} \cdot I_{MAX_DRIVE}$	0..7FFFh	Maximum motor current	With $I_{MAX_DRIVE} = 20 A_{RMS}$ 19988 \Leftrightarrow 12.2 A_{RMS}	pg 35
4	S	R/W	$\frac{1}{7FFF_h} \cdot I_{MAX_DRIVE}$	0..3FFFh	Nominal motor current	With $I_{MAX_DRIVE} = 20 A_{RMS}$ 10322 \Leftrightarrow 6.3 A_{RMS}	pg 35
5	S	R/W	ms	10..7FFFh	I ² t motor limited to maximal drive I ² t	8500 \Leftrightarrow 8500 ms	pg 36
6		R/W		1..1000	Current loop Proportional gain (Kp)		pg 46
7		R/W		0..100	Current loop Integral gain (Ki)		pg 46
8		R/W		0..7FFFh	Current loop Differential gain (Kd)		pg 47
9		R/W	$\frac{0.1 \text{ Electric degree}}{1'000 \text{ RPM}}$	0..100	Phase advance	12 \Leftrightarrow 1.2° electric at 1000 RPM	pg 47
10		R/W	$\frac{1}{7FFF_h} \cdot I_{MAX_DRIVE}$	-1,0..7FFFh	External I-limit/Loop select V2005→ negative value enable the selection speed or current loop.	With $I_{MAX_DRIVE} = 20 A_{RMS}$ 5161 \Leftrightarrow 3.2 A_{RMS}	pg 42
11		R/W					
12		R/W	1/8000 _h	6000h...A000h	Adj.factor sine/cosine	35234 \Leftrightarrow Factor 1.075	pg 37
13	O	R/W	-	0,1	Power down back-up		pg 43
14	S	R/W	-	0..3	Encoder Input configuration bit0:encoder inputs direct to output bit1:count reset on Z input		pg 40

Addr.	St.	R/W	Unit	Limits	Description	Example	Detail
15		R/W					
16		R/W					
17	S	R/W	1/revolution	1..2048	Encoder resolution 1025..2048 : Extrapolated resolution	234 ⇔ 234 pulse by revolution	pg 39
18	S	R/W	-	0..6	Encoder marker pulse width 0: ¼ period channel A, gated B\ 1: ½ period channel A, gated B\ 2: 1 period channel A, gated B\ 4: ¼ period channel A, gated A\ (V2005→). 5: ½ period channel A, gated A\ (V2005→). 6: 1 period channel A, gated A\ (V2005→).		pg 39
19		R/W	$1/2^{16}$ turns	8000..7FFFh	Encoder marker pulse position	8192 ⇔ 1/8 turns	pg 39
20		R/W		1..7FFFh	Speed loop Proportional gain		pg 48
21		R/W		0..7FFFh	Speed loop Integral gain		pg 48
22		R/W		0..7FFFh	Speed loop Differential gain		pg 48
23	S	R/W	0.925 or 1.85 RPM	-8191..8191	Maximum speed (for 10V input) depends of encoder resolution	3200 ⇔ 2960 or 5920 RPM	pg 37
24	S	R/W	-	0..3	End limit switches n/o or n/c V2005→ : Bit 15 enable special function (see detail page)		pg 41
25	S	R/W	-	0..3	Direction stop		pg 41
26		R/W	-	0,1	Speed or Current loop control 0: Speedloop 1: Currentloop		pg 44
27		R/W	-	0,1	Digital, analogue or other command 0 : Digital 1 : Analogue 2 : Other command		pg 44

Addr.	St.	R/W	Unit	Limits	Description	Example	Detail		
28		R/W	$\frac{1}{7FFF_h} \cdot V_{MAX}$	-255..255	Analogue command offset with speedloop control	With $V_{MAX} = 3000$ RPM 22 \Leftrightarrow 2 RPM	pg 44		
			$\frac{1}{7FFF_h} \cdot I_{MAX_DRIVE}$		Analogue command offset with currentloop control	With $I_{MAX_DRIVE} = 10$ A 33 \Leftrightarrow 0.01 A			
29		R/W	55.6 RPM/s	0,1..7FFFh	Command Slope 0 : No ramp	100 \Leftrightarrow 556 RPM/s 0 \Leftrightarrow No ramp	pg 45		
30	S	R/W	-	0,2	Monitoring Relay Rdy/Ala/Ena 0 : Relay-Ready (Alarm inverted) 1 : Relay-Alarm 2 : Relay-Enable (V2005→)		pg 42		
31	n.i.	R/W	-	0,1,2	Enable hardware/serial/edge				
32		R/W	ms	0..32000	Watchdog software communication (V2005→)		pg 43		
33	S	R/W	-	0..FFFFh	Alarm latch		pg 42		
								Bit	Description
								0	Latch alarm 7 (over or under voltage alarm)
								2	Latch alarm d (earth fault)
								4	Latch alarm 2 (I^2t) (V2005→)
6	Latch alarm b (over speed)								
34		R/W	REV/4096	0..256	Encoder dead window (V2005→)	5 \Leftrightarrow dead window = 5 REV/4096	pg 39		
35		R/W	ms	0,1..136	Motor brake delay (V2005→)	0 \Leftrightarrow Motor brake inactive 20 \Leftrightarrow 20 ms delay	pg 43		
36		R/W							
37		R/W							
38	O	R/W	-	0,32	SSI number total of bit				
39	O	R/W		0,20	SSI number of bit per revolution				

Addr.	St.	R/W	Unit	Limits	Description	Example	Detail
40	O	R/W	Compute period (~132 us)	0..32000	IU/CU cyclic transmit period	1504 ⇔ 200 ms period	pg 41
41		R/W			Scope parameter		pg 19
42		R/W			Scope parameter		
43		R/W			Scope parameter		
44		R/W			Scope parameter		
45		R/W			Scope parameter		
46		R/W			Scope options		
47		R/W					
48	O	R/W	-	0..FFFFh	IU/CU command		pg 42
49	O	R/W	-	0..255	Cyclic parameter address		pg 42
50		R/W	0.925/4 RPM	8000..7FFFh	Digital command with Speedloop control	13838 ⇔ 3200 RPM	pg 44
			$\frac{\sqrt{2}}{7FFF_h} \cdot I_{MAX_DRIVE}$	8000..7FFFh	Digital command with Currentloop control	with $I_{MAX_DRIVE} = 20 A_{RMS}$ 6226 ⇔ 3.8 A_{RMS}	
51		R/W	-	0..255	Status display 7 segment value 0 : Internal status, other values : bit 7 = DP, bit 6..0 = SEG A..G	146 ⇔ DP + SEGMENT_F + SEGMENT_C	pg 44
52		R/W	revolution	0..FFFFh	Motor revolutions counter		pg 44
53	O	R/W	-	0..FFFFh	Encoder input counter		pg 41
54		R/W			Parameter for asynchronous motors		Ch. E
55		R/W			Parameter for asynchronous motors		Ch. E
56		R/W			Stepper function parameter		apart
57		R/W			Profile & stepper function parameter		apart
58		R/W			Profile & stepper function parameter		apart
59		R/W			Profile & stepper function parameter		apart
60		R/W			Internal register		
61		R/W			Internal register		

Addr.	St.	R/W	Unit	Limits	Description	Example	Detail
62		R/W			Internal register		
63		R/W			Internal register		
64		R			Status register		
			Bit	Description	Drive display		
			0	Fault Int : Over or under voltage of DC Bus			
			1	FO N	Power module fault (over I, over Temp)		
			2	FO UP			
			3	FO VP			
			4	FO WP			
			5				
			6	Setup mode			
			7	End-switch or direction stop active			
			8	Thermostat motor			
			9	V6 OK			
			10	End-switch 1			
			11	End-switch 2			
			12	Power down			
			13	External I-limit/Loop select input			
			14	AC fail			
			15	Enable/disable		0/1	
65		R			Alarm register		
			Bit	Description	Drive display		
			0	Fault Int : Over or under voltage alarm	7		
			1	Power module fault	6		
			2				
			3	Internal over temperature (>80°C)	4		
			4	I ² t (only if latched)	2		
			5	Resolver fault	5		
			6	Over Speed	b		
			7	Motor link fault	C		
			8	Thermostat motor	3		
			9	Over braking	h		
			10	Over speed asynchronous	u		
			11				
			12	Position error (Profil, Stepper functions)	PA, A		
			13	Software watchdog	9		
			14	Firmware not OK	F		
			15	Parameters not OK	E		

Addr.	St.	R/W	Unit	Limits	Description	Example	Detail
66		R	°C		Heatsink temperature	32 ⇔ 32 °C	
67		R	$\frac{2\sqrt{2}}{7FFF_h} \cdot I_{MAX_DRIVE}$	8000h..7FFFh	Instantaneous motor current	With $I_{MAX_DRIVE} = 20 A_{RMS}$ 7241 ⇔ 12.5 Apeak	
68		R	0.925 RPM	8000h..7FFFh	Instantaneous motor speed	2667 ⇔ 2467 RPM	
69		R	$1/2^{16}$ turns	0..FFFFh	Resolver position within a revolution	4096 ⇔ 1/16 turn	
70		R					
71		R	-	1..15	Axis address		
72		R	-		Monitor Version		
73		R	-		Firmware Version		
74		R	-		FPGA Version		
75		R					
76		R					
77		R					
78		R	-		Type of Hiperface alarm	Available only with the Hiperface feedback	
	Bit	Description					
	0	Type of encoder unknown					
	1						
	2	SIN + COS out of range					
	3	Timeout RS485 Hiperface					
4	Position error						
79		R					
80		R					
81		R					
82		R			Fan switch on temperature	40 ⇔ Fan switch on at 40°C, switch off at 35°C	
83		R			Control Unit ID		
84		R			Commutation dead time		
85		R			Options 2		

Addr.	St.	R/W	Unit	Limits	Description	Example	Detail
86		R	A_{RMS}		Maximum drive current (I_{MAX_DRIVE})	$20 \leftrightarrow 20 A_{RMS}$	
87		R	A_{RMS}		Nominal continuous drive current	$10 \leftrightarrow 10 A_{RMS}$	
88		R	ms		Maximum drive I^2t		
89		R	-		Power modules		
90		R	V_{RMS}		Line voltage input	$400 \leftrightarrow 400 V_{RMS}$	
91		R	-		Options 1		
92		R	-		Hardware version		
93		R	-		Delivery date	$1497 \leftrightarrow$ week 14 in 1997	
94		R	-		Customer		
95		R	-		Serial Number		
96		R	-		Firmware abilities		
			Bit		Description		
			0		Asynchronous motor		
			1		High speed (> 6000 rpm, until 12000 rpm)		
			3		Stepper function		
			10		Software limits		
			11		Hiperface		
			13		EnDat		
		14		Setup tools			
97		R	$\frac{-10}{7FFF_h} V$	8000..7FFFh	External analogue command 10V		
98		R	$\frac{2.5}{7FFF_h} V$	8000..7FFFh	External analogue command 2.5V		
99		R	see parameter 50		Internal digital command		
100	O	R			Scope values		
...	O	R			Scope values		
179	O	R			Scope values		

Addr.	St.	R/W	Unit	Limits	Description	Example	Detail
180		R	35 μ V/bit		Resolver Sine		
181		R	35 μ V/bit		Resolver Cosine		
182		R	$\frac{2\sqrt{2}}{7FFF_h} \cdot I_{MAX_DRIVE}$	8000..7FFFh	Current Command		
183		R					
184		R					
185		R	$\frac{2\sqrt{2}}{7FFF_h} \cdot I_{MAX_DRIVE}$	8000..7FFFh	Phase U current		
186		R	$\frac{2\sqrt{2}}{7FFF_h} \cdot I_{MAX_DRIVE}$	8000..7FFFh	Phase V current		
187		R	$\frac{2\sqrt{2}}{7FFF_h} \cdot I_{MAX_DRIVE}$	8000..7FFFh	Phase W current		
188		R					
189		R					
190		R					
191		R					
192		R			I ² t threshold		pg 36
193		R			Instant I ² t		pg 36

1.2 Scope parameters

Scope parameters :

5 parameters for scope settings (Address 41..45).

80 read only parameters for the measuring values (Address 100..179).

Use of scope function

When a time scale different of 0 is written, the drive starts the measurement, the parameters 100..179 are filled cyclically with samples.

When trigger condition is satisfied, the drive saves the position (trigger position parameter) and continues the measurement during the number of post-trig samples defined. At the end of the measurements, time scale parameter is set to 0 to indicate the end.

Add		Description	Comment
41		Time scale	Factor of 133 us for the sampling time.
42	HB	Parameter 1 address (channel 1)	Address of parameter 1 to measure
	LB	Parameter 1 scale	Number of shift (left shift for positive value and right shift for negative value)
43	HB	Parameter 2 address (channel 2)	Address of parameter 2 to measure
	LB	Parameter 2 scale	Number of shift (left shift for positive value and right shift for negative value)
44	HB	Slope positive/negative or null	null for no trigger
	LB	Trigger value	Threshold value
45	HB	Trigger position	Address where the trig point is (100..179)
	LB	Number of Post-trig samples	0 : 100 % pretrig 80 : 0 % pretrig
46	Scope options (since firmware V2005)	bit 15 = 0 → saturation (when values overshoot with the defined scale). bit 15 = 1 → no saturation (for bit wise operations or low bits watching)	
100	HB	Value 1 of parameter 1	Measured value
	LB	Value 1 of parameter 2	Measured value
..			
179	HB	Value 80 of parameter 1	Measured value
	LB	Value 80 of parameter 2	Measured value

CHAPTER D - SETTING TO WORK

1. Wiring

The wiring of the drive series 2000/4000 must be carried out according to the schematic in these instructions. Local wiring regulation must be observed.

Special attention should be paid with respect to wiring rules regarding ground, earth and neutral.

The earth wire to the drive, motor and housing must be as short as possible and connected to a common earth point.

The global wiring plan is represented in Figure 1 on page 21.

1.1 Cable lengths and cross-sections

Length of cable between drive and motor : max. 15 m.

The following table gives the minimal recommended cross-sections :

Drive type	Supply cable & Motor cable		Control signals cables	
	AWG	mm ²	AWG	mm ²
2004 2005 2006 2009 2010 4003 4005 4009	14	2	24	0.14
2020 4015 4025	12	2.5		
4050	10	5		

1.2 Global wiring plan

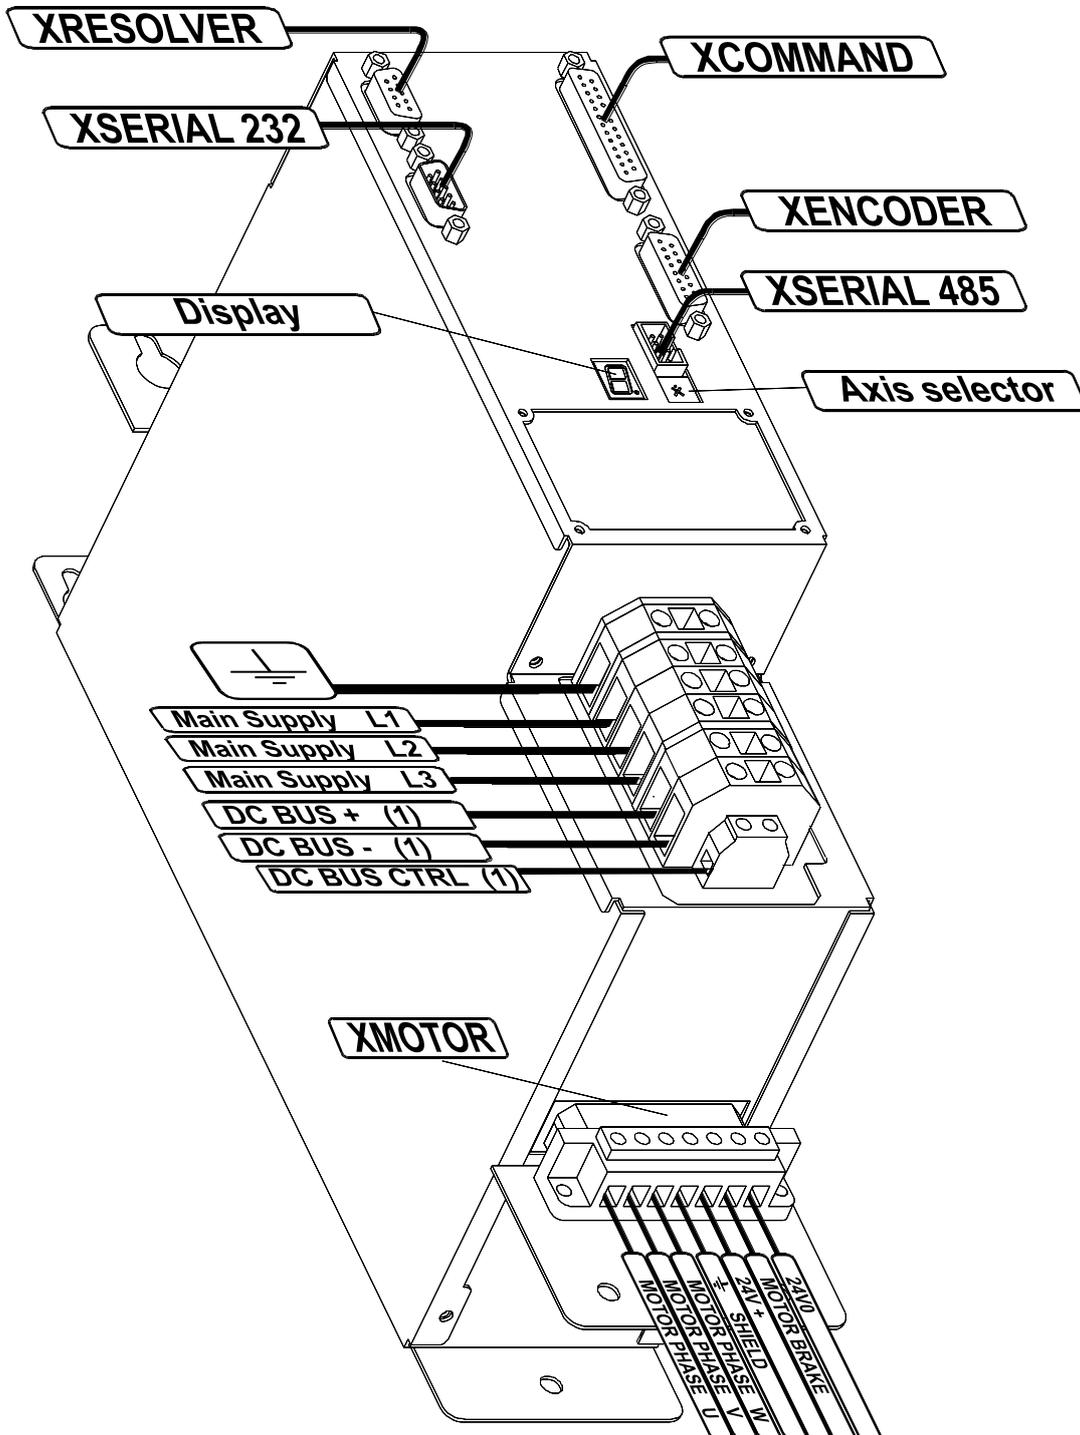



Figure 1 - Global wiring plan

(1) Note :


DC BUS +/- and DC BUS CTRL terminals are not present when drive is equipped with « EMC filter » option.

1.3 Control unit wiring


XRESOLVER

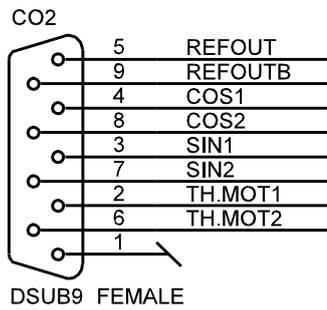


XSERIAL 232

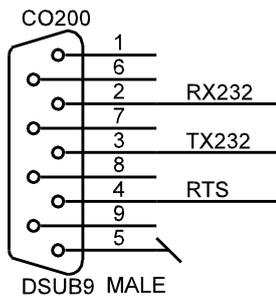


XCOMMAND

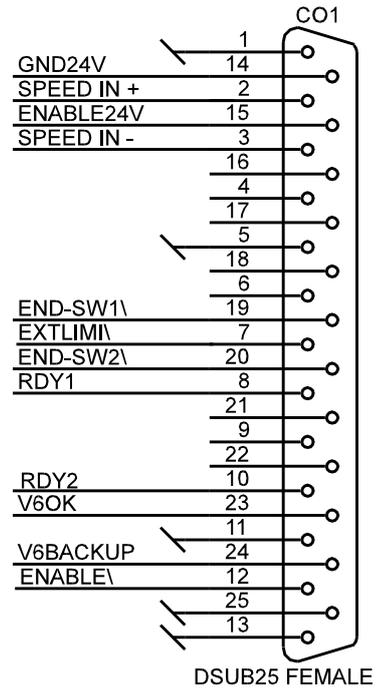

XENCODER

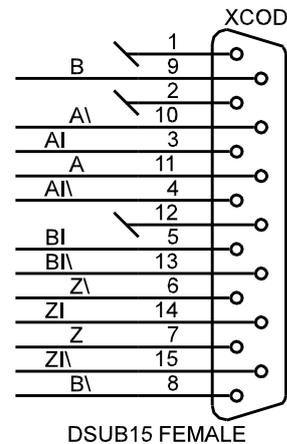

XSERIAL 485

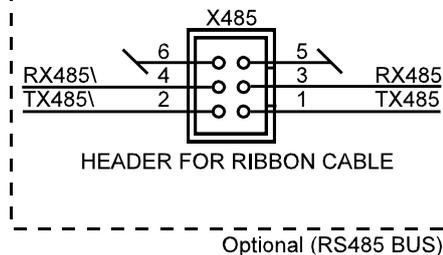

1.3.1 XRESOLVER

Correct wiring of the resolver is the **precondition** for good and reliable operation of the servo-amplifiers series 2000 & 4000. Non-compliance of the instructions operations in this manual will cause a **deterioration of the specified performances**.

A cable with the following characteristics is needed :

- 3 pairs of conductors 0,14 mm² twisted in pairs and shielded separately.
- 2 conductors of 0,5 mm² shielded separately
- an overall shield contacted with the previous shields.

The cable wiring should be done as Figure 2.

The overall shield must be connected to both the motor and the amplifier. It should be noted that the contact from the overall shield to amplifier and motor must be made by using as much contact area as possible. The use of "Pig Tail" on the overall shield should be avoided. It is recommended to follow the convention (signal / conductor colour) used in this manual.

Contacts 2 and 6 are intended for the motor thermal switch wiring. The contact should be either of type normally closed, or of type normally open.

It should have the following characteristics :

contact closed : 1 k ohm
 contact opened : 10 k ohm

N.B. : Take care to the polarity with semiconductor temperature sensor.

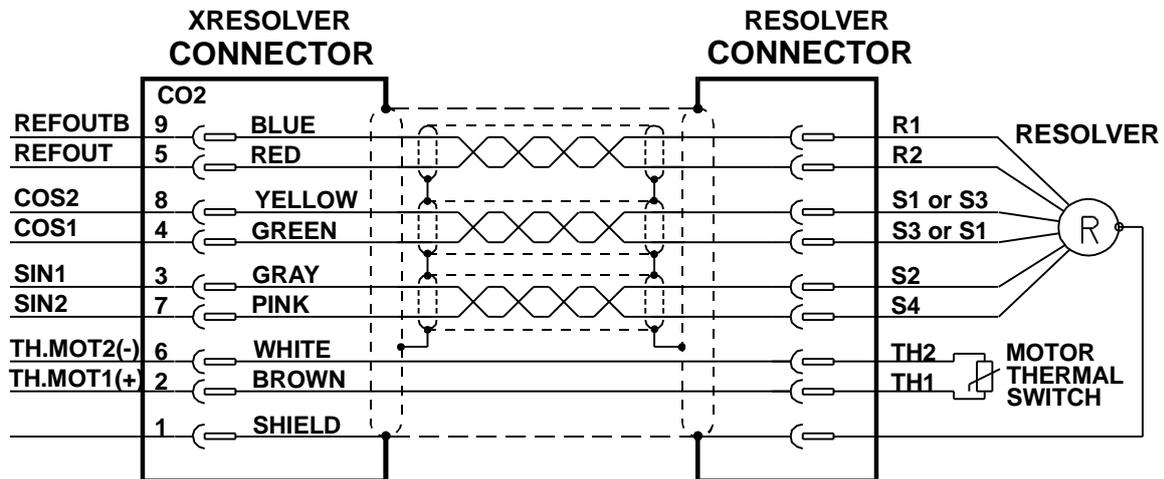


Figure 2 - Resolver and motor thermal switch wiring

1.3.2 XCOMMAND

Pin Nr.	Pin name	Function	Pin type
---------	----------	----------	----------

1,5,11,13	GND	General purpose ground for digital input, output and reference for SPEED IN.	Power ground
2	SPEED IN+	Non-inverted differential input command Max input voltage +/- 20VDC Max differential input voltage +/-10V Differential input impedance : 8k Ω	Analogue input See note (1)
3	SPEED IN-	Inverted differential input command Max input voltage +/- 10VDC Max differential input voltage +/-10V Differential input impedance : 8k Ω	Analogue input See note (1)
7	EXTLIMI\	Digital input for current limitation to the programmed value. Active low. Internal pull-up 4k7 to 5V.	Digital input
8,10	RDY1,RDY2	Potential free contact of the make contact relay. 24 VDC, 0.5 A, 10 VA	Contact output
12	ENABLE\	Passive ENABLE. Close this input to GND to active the power stage. Internal pull-up 4k7 to 5V.	Digital input
14	GND 24V	Ground of the active optocoupled ENABLE (potential free, max 50VDC to GND).	External ground
15	ENABLE 24V	Active optocoupled ENABLE. Max input voltage : 30 VDC (with respect to GND 24V) Active level : 20..30 VDC / 5k Ω (potential free, max 50VDC to GND)	Power input
19	END-SW1\	Limit switch input affecting the positive speed command. Internal pull-up 4k7 to 5V. See note (2)	Digital input
20	END-SW2\	Limit switch input affecting the negative speed command. Internal pull-up 4k7 to 5V. See note (2)	Digital input
23	V6OK	High if 6V is internal powered. Output voltage 0..6 VDC, High Z Do not load with less than 10 K Ω	Digital output
24	V6BACKUP	External 6V power supply input for the CU and optional IU boards. Supply voltage: 6..7 VDC Supply current : 500mA max + IU current.	Power input
25	GND	Ground for the external 6V power supply.	Power ground

Pins 4,6,9,16,17,18,21,22 are not used.

(1) Common mode voltage range (CMVR) +/-10V if common on SPEED IN-

(2) Close this input to GND to inhibit or to free the movement (depend of parameter 24 configuration).

The on-board relay is **normally open contact**. The rating of his contact is as follows:

24 V - 0,5 A - 10 VA

1.3.3 XENCODER

The connector XENCODER provides simulated encoder signals and allows to read signals coming from an external encoder.

Pin Nr.	Pin name	Function	Pin type
1,2 & 12	GND	Internal ground of the CU board	Power ground
3	AI	Non-inverted impulse A input	Differential input
4	AI\	Inverted impulse A input	Differential input
5	BI	Non-inverted impulse B input	Differential input
6	Z\	Inverted zero impulse output	Differential output
7	Z	Non-inverted zero impulse output	Differential output
8	B\	Inverted impulse B output	Differential output
9	B	Non-inverted impulse B output	Differential output
10	A\	Inverted impulse A output	Differential output
11	A	Non-inverted impulse A output	Differential output
13	BI\	Inverted impulse B input	Differential input
14	ZI	Non-inverted zero impulse input	Differential input
15	ZI\	Inverted zero impulse input	Differential input

Simulated incremental encoder signals provided on connector XENCODER:

The provided signals A, A / B, B / Z, Z / and GND are similar to the signals of an incremental encoder signal with differential outputs. The line driver used on-board is type 75172. The line receiver of the position controller should be type 75175.

These signals are always present and do not require any external supply.

Incremental encoder signals read on connector XENCODER:

The read signals AI, AI/ BI, BI/ ZI, ZI/ and GND are interpreted as incremental encoder signals with differential outputs. The line receiver used on-board is type 75175.

Encoder cable wiring:

The GND signal should be common to the position controller and to the servo-amplifier.

The cable connecting the position controller to the servo-amplifier should be shielded with twisted pairs for differential input and output. The shield must be connected to both the position controller and the amplifier. It should be noted that the contact from the shield to the metallic case of the amplifier plug-in connector (XENCODER) and the contact from the shield to the position controller metallic cabinet must be made by using as much contact area as possible. The use of "Pig Tail" on the shield should be avoided.

1.3.4 XSERIAL 232 and XSERIAL 485


The serial link is used to set or monitor drive parameters stored in non-volatile memory using the configuration program.

The serial links could be also used to down-load an up-dated firmware or an other firmware version.

Pin-out of the RS232 connector (XSERIAL 232)

Pin Assignment for Serial Port on the Drive			Pin Nr. for Serial Port on P.C.	
Pin Nr.	Pin name	Function	9-Pin connector	25-Pin Connector
1,6,7,8 & 9	N.C.	Not connected (potential free).		
2	RX232	Transmit Data output	3	2
3	TX232	Receive Data input	2	3
4	RTS	Request To Send output	6 & 8	6 & 5
5	GND	Common ground	5	7

The minimal wiring of the RS232 serial cable is as follows:

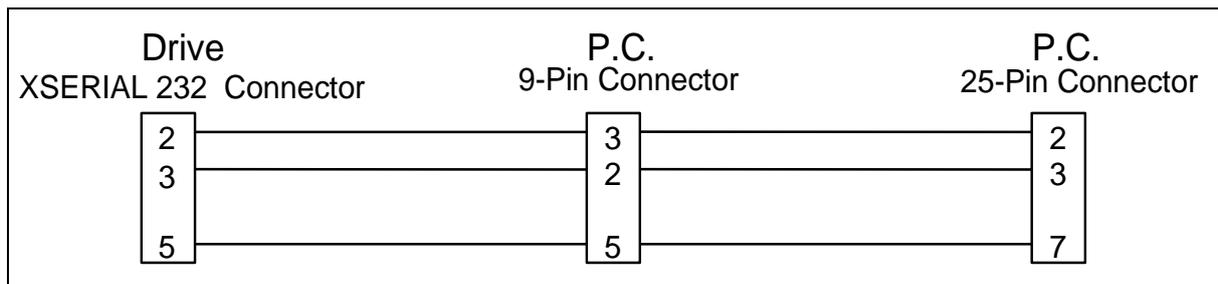

Pin-out of the RS485 connector (XSERIAL 485)

Pin Nr.	Pin name	Function
1	TX485	Non-inverted Transmit Data output
2	TX485\	Inverted Transmit Data output
3	RX485	Non-inverted Receive Data input
4	RX485\	Inverted Receive Data input
5 & 6	GND	Common ground

1.3.5 Axis selector

RS232 link



The axis selector must be on « 0 », the drive replies to RS232 messages sent to address Nr.1.

RS485 link



The axis selector defines the axis number of the drive, from address 1 to 15. The drive will reply to RS485 messages sent to the corresponding address (Axis selector on 5 \Rightarrow drive reply to messages sent to address Nr. 5).


Notes :

- When the drive does not include the RS485 option (axis selector nonexistent), only the RS232 link is usable (message constituted with address Nr.1).
- See Dialogue protocol description, page 8, to know the way for the construction of messages.
- The drive must be resetted (send of Reset order or switch Power OFF/ON) to enable a change of the selector position.
- A firmware upgrade is only possible with a RS232 link.
Exception : when drive is programmed with a monitor version 300_h (or higher), the firmware update is also possible by RS485 (the parameter 72 indicates the monitor version).

1.4 Power Connectors

1.4.1 Mini drive type 2004


The power and motor connectors are Weidmüller, BLZ 7.50/3B and BLZ 7.50/4B (7.5 size).

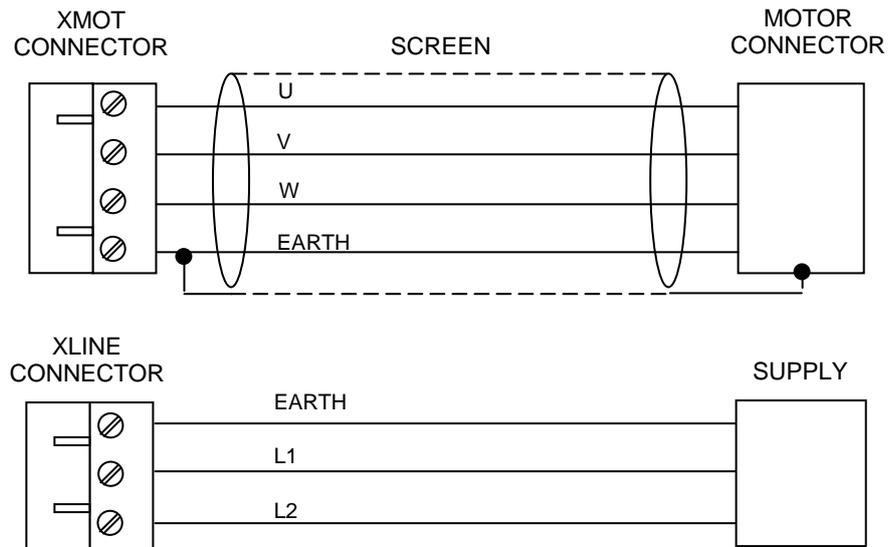

Safety note : For safety use, XMOT must always be connected.


1.4.2 Mini drive types 2006 and 2009

The power and motor connectors are Weidmüller BLZ 7.50/4B (7.5 size).

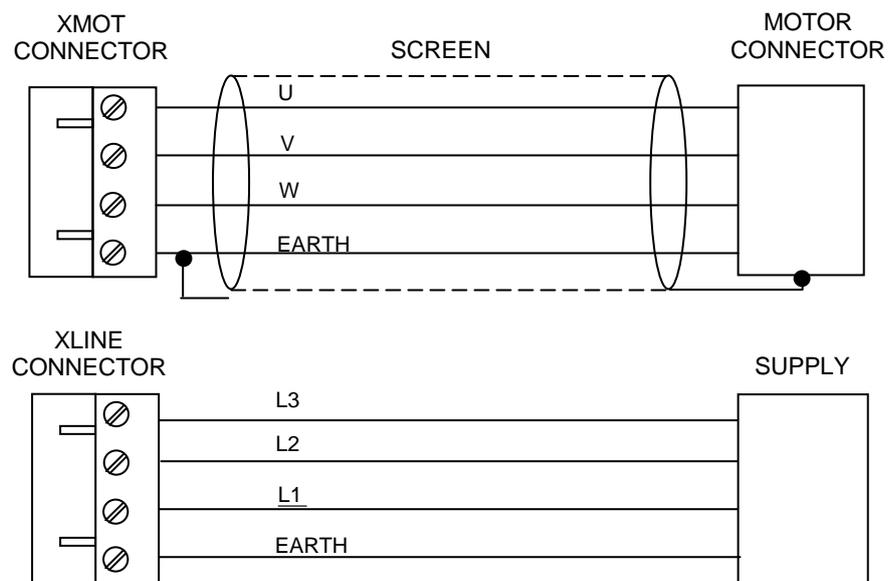

Safety note : For safety use, XMOT must always be connected.

1.4.3 XMOT Connector for Small and Medium drives

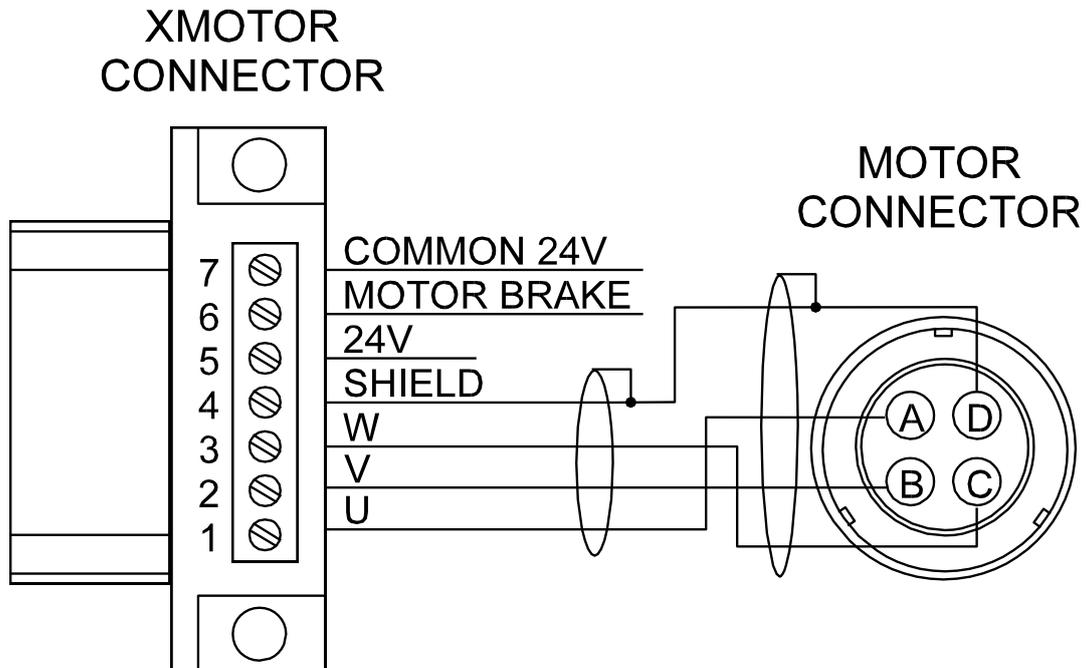

Pin Nr.	Pin Name	Function	Pin Type
1	MOTOR PHASE U	Motor terminal	Power Output
2	MOTOR PHASE V	Motor terminal	Power Output
3	MOTOR PHASE W	Motor terminal	Power Output
4	SHIELD	Motor cable shield and PE	
5	24V (option)	External Power 24VDC Max input voltage : 30VDC	Power Input
6	MOTOR BRAKE (option)	Motor Brake terminal Max output current : 2.5A	Output
7	COMMON 24V (option)	Ground for the external 24VDC and for motor brake	Power Ground

Note :

See Motor brake delay parameter description, page 43, for more information about Motor brake.

1.4.4 Determining the motor phases (without drive)**Important :**

This operation will be done only when the three-phase motor order is unknown (motor prototype or no documentation).

A DC supply of about 3A is necessary for this operation.

The procedure is as follows :

1. Determine arbitrarily phase **U** as one of the 3 motor phases.
2. Connect **U** to «+» and a **2nd phase** motor to «-» of the DC supply.
3. Switch supply on. The shaft will move to a stable position.
4. Mark the new shaft position with a pencil, at top center.
5. Switch supply off, disconnect the «-» from the **2nd motor phase** and reconnect the «-» to the **3rd motor phase**. Switch supply on and observe the axis rotation direction (report the direction in the table below).
6. Mark with a pencil the new shaft axis position.
7. With the help of the table below, determine the 2 unknown motor phases :

Sense of axis rotation	2 nd Motor phase	3 rd motor Phase
Clockwise	V	W
Anti-clockwise	W	V

When this operation is done, it is important to define the resolver shift angle parameter (P1), see section 4.1 of chapter D.

2. Display indications

The display shows the state of the drive and of the motor.



Drive in function
torque enable



Drive in function
torque enable and zero position



Drive in function
torque disable



Drive in function
torque disable and zero position



End limit switch 2 activated.
The negative speed command is affected.




End limit switch 1 activated.
The positive speed command is affected.



The decimal point is « ON » when
the motor turns clockwise



The decimal point is « OFF » when
the motor turns anti-clockwise

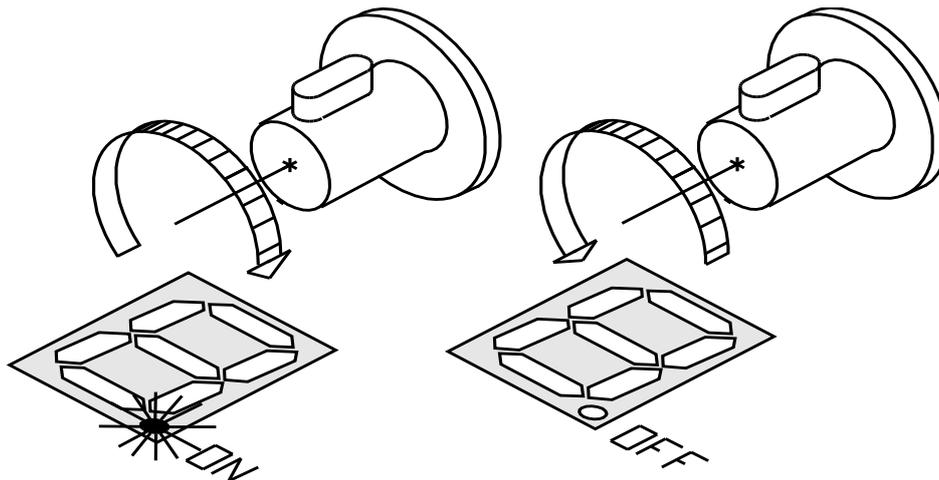

If the decimal point lights up during anti-clockwise rotation, wires S1 (COS1) and S3 (COS2) of resolver connector must be inverted (see section 1.3.1 of chapter D).

2.1 Alarms

The alarm H has the most priority (following F, E, 9, C, h, 7, 6, 5, b, 4, 3, 2). If some alarms takes place simultaneously, only the one with the higher priority will be displayed.



I^2t
(only if latched)



Thermostat motor



Internal over temperature (>80°C)



Resolver fault
If >110% or <60%



Power module fault



Over or under voltage



Software watchdog



Over speed when 125% of max.
motor speed is reached.
(only if latched)



Motor link fault



Parameters not OK



Firmware not OK



Hardware incompatibility
blinking



Over braking

The Parameter 33 (Alarm latch) allows you to define which alarm must be latched.

2.2 Warnings



Over current, appears during 1 sec
when 120% of maximum drive
current is reached (bad
regulation parameters).



I^2t reached.
(if not latched)

3. Parameters settings

3.1 Motor parameters

These parameters depend on the connected motor characteristics. This information is generally indicated on rating plate of the motor or given in the motor data sheet.

PAIR OF MOTOR POLES, ADDRESS 0

This parameter must contain the number of motor poles pair. This number can be between 1 and 6 pairs.

RESOLVER SHIFT ANGLE, ADDRESS 1

This value correspond to shift angle between the resolver signal and the motor, from $-\frac{1}{2}$ turn to $+\frac{1}{2}$ turn. The zero value means a ideal combination between the resolver and the motor. See also section 4.1 of chapter D (How to set the resolver shift angle parameter, page 50)

MOTOR THERMOSTAT N/O OR N/C, ADDRESS 2

Type of thermal switch included in the motor, 1 for a normally closed contact and 0 for a normally open contact. Closed and opened contact features :

- contact closed : $\leq 1 \text{ k}\Omega$
- contact opened : $\geq 10 \text{ k}\Omega$

MAXIMUM MOTOR CURRENT, ADDRESS 3

The maximum motor current value is given to the drive with the following equation :

$$\frac{I_{MAX_MOTOR} \cdot 7FFFh}{I_{MAX_DRIVE}}$$

I_{MAX_DRIVE} AND I_{MAX_MOTOR} in A_{RMS} .

This value must be between 0 and 7FFFh, that mean between 0 and I_{MAX_DRIVE}

NOMINAL MOTOR CURRENT, ADDRESS 4

The nominal motor current value is given to the drive with the following equation :

$$\frac{I_{NOMINAL_MOTOR} \cdot 7FFFh}{I_{MAX_DRIVE}}$$


With I_{MAX_DRIVE} AND $I_{NOMINAL_MOTOR}$ in A_{RMS} .

This value must be between 0 and 3FFFh, that mean between 0 and $I_{NOMINAL_DRIVE}$

I²t MOTOR, ADDRESS 5

The I²t motor (P5) is defined as elapsed time in « ms » when I²t value progresses from zero to I²t threshold (P192) when drive current equals the double of nominal current (P4).

I²t evolution for I_{INST} = I_{NOM} and I_{INST} = 2 · I_{NOM} :

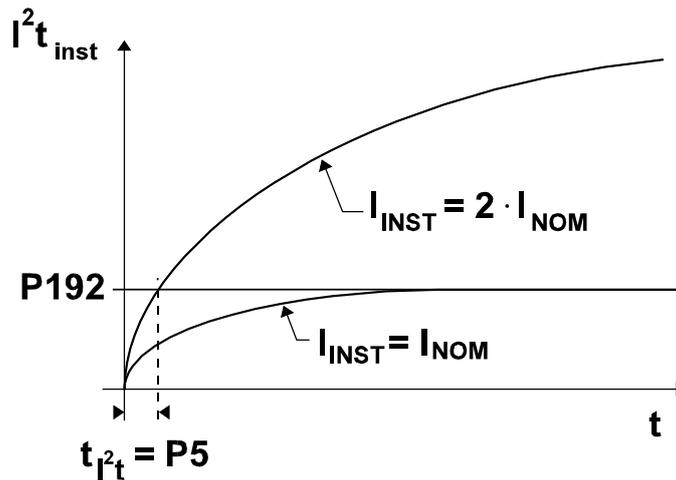

Instant I²t, Address 193 :

Instant I²t (P193) is the instantaneous value of the I²t. In comparison of the I²t threshold, this parameter gives an information about motor load.

I²t threshold, Address 192 :

The I²t threshold (P192) is defined as equal to the I²t value when continuous drive current equals nominal current.

I²t warning (if I²t not latched) :

When I²t value reaches the I²t threshold, the maximal current is limited to nominal current and 2 is displayed while I²t value is higher than I²t threshold.

I²t alarm (if I²t latched) :

The drive power stage is disabled when the I²t value reaches the I²t threshold and 2 is displayed.

The instant I²t in comparison of I²t threshold can be observed on the Scope of the user software. This method is useful to determine and to check the I²t value and the motor load.

MAXIMUM SPEED (FOR 10V INPUT), ADDRESS 23

Maximum motor speed, this value is generally indicated on the rating plate of the motor.

Divide the RPM value by 0.925 to obtain the drive value if parameter P17 (encoder resolution) is bigger as 1024.

Divide the RPM value by 1.85 to obtain the drive value if parameter P17 (encoder resolution) is smaller as 1025.

For analogue command mode, this value fixes the speed range (max input voltage correspond to this speed).

The over speed alarm is activated (if latched) when the motor speed value is equal to or higher than 125% of the maximal speed value.

ADJ.FACTOR SINE/COSINE, ADDRESS 12

Asymmetric resolver adjustment :

$$\text{factor} = \text{maximum cosine value} / \text{maximum sine value}$$

Parameter 12 = 8000h • factor (6000h...A000h ⇒ factor = 0.75 .. 1.27)

The windows user software allows you to compute automatically this factor by a double click on the value of parameter 12 in the « Parameters values » window (just move motor position to each maximum values of sine and cosine).

3.1.1 Example of motor parameters**Example with DRIVE type 2010****MOTOR FEATURES (EXAMPLE):**

Poles pairs	4	
Nominal Current	6.68	A
Nominal Power	1.320	kW
Max. Speed	3000	RPM

DRIVE TYPE 2010 FEATURES :

$$I_{\text{NOM_DRIVE}} = 10 \text{ A}$$

$$I_{\text{MAX_DRIVE}} = 20 \text{ A}$$

{ PAIR OF MOTOR POLES, ADDRESS 0 } \leftarrow 4

{ RESOLVER SHIFT ANGLE, ADDRESS 1 } \leftarrow 0

Supposition : ideal combination between the resolver and the motor.

{ MOTOR THERMOSTAT N/O OR N/C, ADDRESS 2 } \leftarrow 0

Thermostat motor normally opened.

{ MAXIMUM MOTOR CURRENT, ADDRESS 3 } \leftarrow 21790

With maximum motor current equal at the double of the nominal current.

$$\frac{I_{\text{MAX_MOTOR}} = 13.3 \text{ A}}{I_{\text{MAX_MOTOR}} \cdot 7FFFh} = \frac{13.3 \cdot 7FFFh}{20} = 21790 = 551Eh$$

{ NOMINAL MOTOR CURRENT, ADDRESS 4 } \leftarrow 10945

$$\frac{I_{\text{NOMINAL_MOTOR}} \cdot 7FFFh}{I_{\text{MAX_DRIVE}}} = \frac{6.68 \cdot 7FFFh}{20} = 10945 = 2AC1h$$

{ I2T MOTOR, ADDRESS 5 }

{ MAXIMUM SPEED (FOR 10V INPUT), ADDRESS 23 } \leftarrow 3243

$$n_{\text{MAX}} / 0.925 = 3000 / 0.925 = 3243.2$$

3.2 Installation parameters

3.2.1 Encoder configuration

ENCODER RESOLUTION, ADDRESS 17.

Number of pulses for one revolution, between 1 and 2048 pulses per revolution.
For 1025 to 2048 pulses per revolution, it is an extrapolated resolution.

ENCODER MARKER PULSE WIDTH, ADDRESS 18.

Width of the encoder marker pulse :

- 0 : $\frac{1}{4}$ period of encoder output channel A, gated B\.
- 1 : $\frac{1}{2}$ period of encoder output channel A, gated B\.
- 2 : 1 period of encoder output channel A, gated B\.

Firmware version 2005 or higher :

- 4 : $\frac{1}{4}$ period of encoder output channel A, gated A\.
- 5 : $\frac{1}{2}$ period of encoder output channel A, gated A\.
- 6 : 1 period of encoder output channel A, gated A\.

ENCODER MARKER PULSE POSITION, ADDRESS 19.

Defines the shift between the marker pulse position and the position zero, between $-\frac{1}{2}$ and $+\frac{1}{2}$ turn. To shift of $1/x$ turn enter value $2^{16} * 1/x$.

ENCODER DEAD WINDOW, ADDRESS 34.

Firmware version 2005 or higher :

Width of the dead window for encoder simulation.

- 0 : No dead window
- 1..xx : Dead window width in REV/4096.

Example : The motor position oscillates from $\pm 1/4096$ revolution.

Without dead window : the encoder outputs change continually (± 1 inc.).

With a dead window programmed to 3, the encoder simulation signals will be steady.


This function is useful to reduce vibrations and noises in a system, but be careful that the position precision is also reduced. The position error is not cumulative.

ENCODER OUTPUT SIGNALS EXAMPLE :


ENCODER MARKER PULSE WIDTH = 1

ENCODER MARKER PULSE POSITION = 0

With a positive speed (display dot off) :

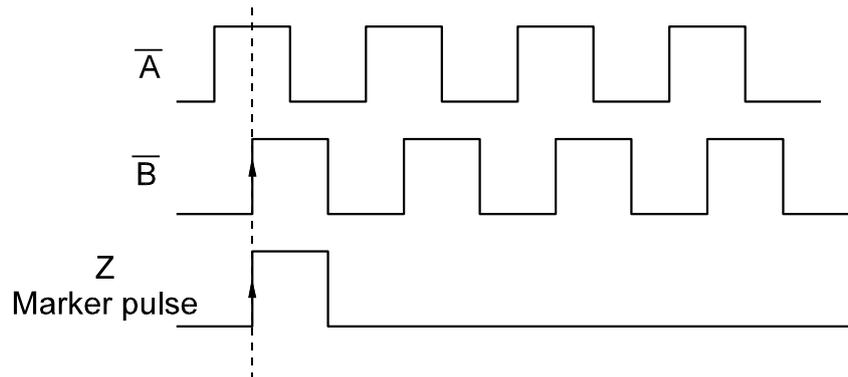**ENCODER INPUT CONFIGURATION, ADDRESS 14 (OPTION).**

Options for the encoder input, bit 0 and 1 must be set to change the encoder input configuration :

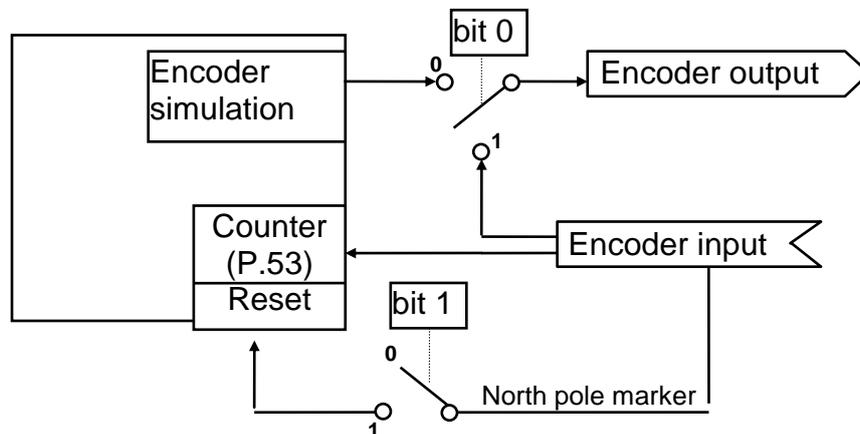

ENCODER INPUT COUNTER, ADDRESS 53 (OPTION).

Value of the encoder input counter. This value is incremented or decremented in accordance with the encoder input signal.

3.2.2 End-switch configuration

Limit end-switch 1 affects the positive speed command, end-switch 2 affects the negative speed command

END LIMIT SWITCHES N/O OR N/C, ADDRESS 24

End-switch 1 and 2 type, normally opened or closed contact :

	0	1
End-switch 1 (bit 0)	normally opened	normally closed
End-switch 2 (bit 1)	normally opened	normally closed

Firmware version 2005 or higher :

Special End-switch function :

Bit 15 = 0 → End-switches standard function.

Bit 15 = 1 → End-switch 1 input clears the integral gain of speed loop.

DIRECTION STOP, ADDRESS 25

Stop any direction by changing this value :

	0	1
bit 0	No effect	Positive speed command stopped
bit 1	No effect	Negative speed command stopped

3.2.3 SSI configuration (option)**IU/CU CYCLIC TRANSMIT PERIOD, ADDRESS 40 (OPTION).**

Period for SSI data transmission.

IU/CU COMMAND, ADDRESS 48 (OPTION).

SSI internal register.

CYCLIC PARAMETER ADDRESS, ADDRESS 49 (OPTION)

SSI internal parameter.

3.2.4 General configuration**MONITORING RELAY RDY/ALA/ENA, ADDRESS 30.**

- 0: Relay ready**, the relay is activated at power up and it is deactivated when an alarm is set (Relay alarm inverted).
- 1: Relay alarm**, the relay is activated only when an alarm is set.

Firmware version 2005 or higher :

- 2: Relay enable**, the relay is activated when the power stage of the drive is enabled

ALARM LATCH, ADDRESS 33.

- Bit 0 : Alarm 7 Over or under voltage alarm
- Bit 2 : Alarm d Earth fault
- Bit 4 : Alarm 2 I²t (firmware version 2005 and higher)
- Bit 6 : Alarm b Over speed

Set or clear these bits to activate or deactivate the latch of the corresponding alarm.

EXTERNAL I-LIMIT/LOOP SELECT, ADDRESS 10.

When the « EXTLIMI\ » input (XCOMMAND/PIN 7) is closed to GND, this value becomes the maximum motor current (the value of parameter 3 is disregarded).

When P.10 = 0, the limitation of maximum current by external input is disabled.

Firmware version 2005 or higher :

When P.10 = -1 :


- EXTLIMI\ input select the speed or current regulation loop :
- EXTLIMI\ = 1 → Speed loop.
- EXTLIMI\ = 0 → Current loop.

MOTOR BRAKE DELAY, ADDRESS 35.

Firmware version 2005 or higher :

0 : No command of motor brake

1..136 : Motor brake is opened (off) when enable input switch ON. When enable input switch OFF, the motor brake is closed (on), speed command is forced to 0 and the power stage is disabled after 1..136 ms.

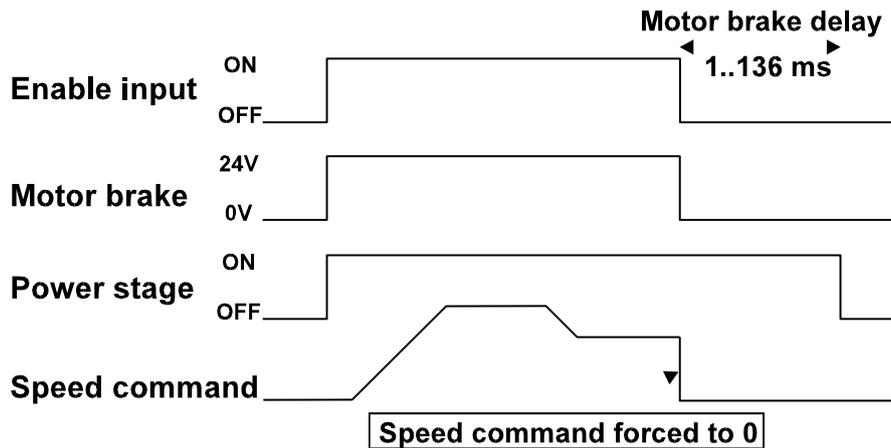**WATCHDOG SOFTWARE COMMUNICATION, ADDRESS 32 .**

Watchdog for the SSI link. If the drive does not receive any SSI data during the defined time (in ms), software watchdog alarm is set (if P.32 = 0: Software watchdog disabled).

Firmware version 2005 or higher :

When this value is different of 0, the watchdog is enabled with the programmed delay for all serial link communications (RS232, RS485 or SSI).

POWER DOWN BACK-UP, ADDRESS 13 (OPTION).


Defines if the drive must save the position at power down (1 for enable this function and 0 for disable).

STATUS DISPLAY 7 SEGMENT VALUE, ADDRESS 51

0: Internal status (the display indicates drive alarms or status)

Change this value to force the display of any information (drive alarms are hidden).

bit7 = DP
bit6 = SEGMENT A
bit5 = SEGMENT B
bit4 = SEGMENT C
bit3 = SEGMENT D
bit2 = SEGMENT E
bit1 = SEGMENT F
bit0 = SEGMENT G

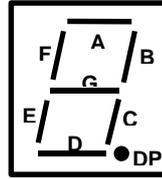**MOTOR REVOLUTIONS COUNTER, ADDRESS 52.**

This value can be read for motor position consulting and can be reset at a chosen position.

3.3 Regulation parameters

3.3.1 Configuration

SPEED OR CURRENT LOOP CONTROL, ADDRESS 26.

0 for speed loop and 1 for current loop control. When speedloop is chosen, the command is read as a speed, when currentloop the command is read as a current.

DIGITAL, ANALOGUE OR OTHER COMMAND, ADDRESS 27.

0 for digital and 1 for analogue.

Digital command :

parameter 50 (Digital command) is read to set the command value.

Analogue command :

Input voltage SPEED IN is converted to set the command value.

DIGITAL COMMAND (SPEED OR CURRENT), ADDRESS 50.


When digital command mode is set, this parameter defines the command value.

ANALOGUE COMMAND OFFSET, ADDRESS 28.

When analogue command mode is chosen, the input offset voltage can be adjusted with this parameter.

COMMAND SLOPE, ADDRESS 29.

Command ramp generator, when this parameter is null, no ramp is performed. When a value different of null is computed, the command edges are limited (for digital and for analogue command), example :

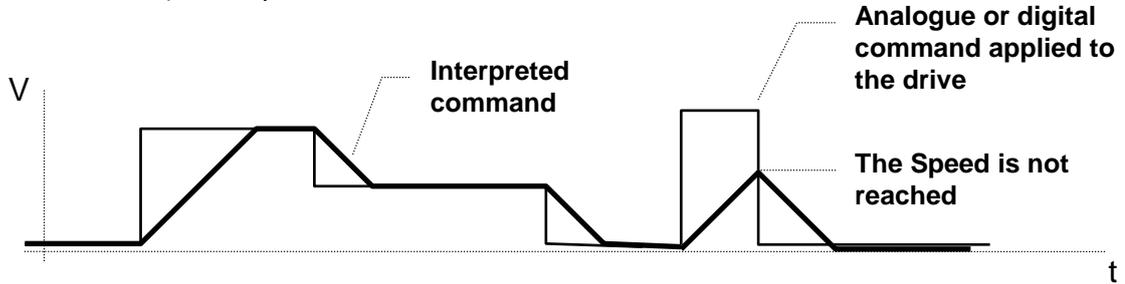


Warning :

If pulse command is applied with a command slope different of zero, it is possible that the wanted speed will be not reached (see second speed cycle of the example).

3.3.2 Current Loop

See also section 4.2 of chapter D (How to set the current loop parameters, page 52).

PID CURRENT LOOP CONTROLLER :

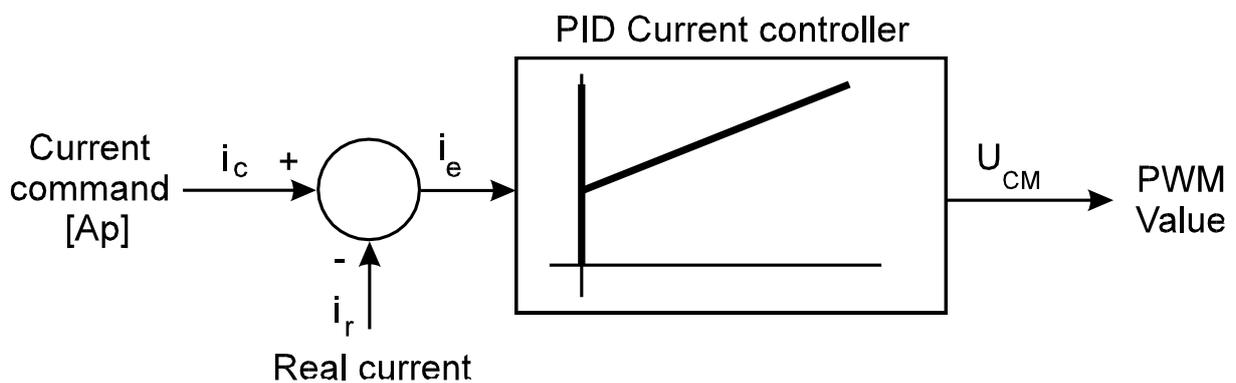

DIGITAL PID EQUATION :

$$U_{CM} = Kp \cdot i_{e[N]} + Ki \cdot \sum_{i=0}^N (i_{e[i]} \cdot \Delta T) + Kd \frac{i_{e[N]} - i_{e[N-1]}}{\Delta T}$$

$i_{e[N]}$: Last sample

ΔT : Sampling time

The drive values are obtained with the following equations :

CURRENT LOOP PROPORTIONAL GAIN (Kp), ADDRESS 6.

2000 series : $Kp = \frac{P_{CURRENT}}{\hat{I}_{MAX}}$ [V/A]

4000 series : $Kp = \frac{\sqrt{3} \cdot P_{CURRENT}}{\hat{I}_{MAX}}$ [V/A]

$P_{CURRENT}$ = Parameter 6

CURRENT LOOP INTEGRAL GAIN (Ki), ADDRESS 7.

2000 series : $Ki = \frac{7500 \cdot I_{CURRENT}}{\hat{I}_{MAX}}$ [V/As]

4000 series : $Ki = \frac{7500 \cdot \sqrt{3} \cdot I_{CURRENT}}{\hat{I}_{MAX}}$ [V/As]

$I_{CURRENT}$ = Parameter 7

CURRENT LOOP DIFFERENTIAL GAIN (Kd), ADDRESS 8.

2000 series :
$$Kd = \frac{133 \cdot 10^{-6} \cdot D_{CURRENT}}{\hat{I}_{MAX}} \quad [Vs/A]$$

4000 series :
$$Kd = \frac{133 \cdot 10^{-6} \cdot \sqrt{3} \cdot D_{CURRENT}}{\hat{I}_{MAX}} \quad [Vs/A]$$

$D_{CURRENT}$ = Parameter 8


ADDRESS 9.

The PHASE ADVANCE is internally computed with a minimal value of 1.23 deg/pairs of motor poles for 1000 rpm, to compensate the delay between the acquisition of the current and the PWM output.
Only larger values than this minimal value will affect the regulation.

3.3.3 Speed Loop

See also section 4.3 of chapter D (How to set the speed loop parameters, page 54).

PID SPEED LOOP CONTROLLER :

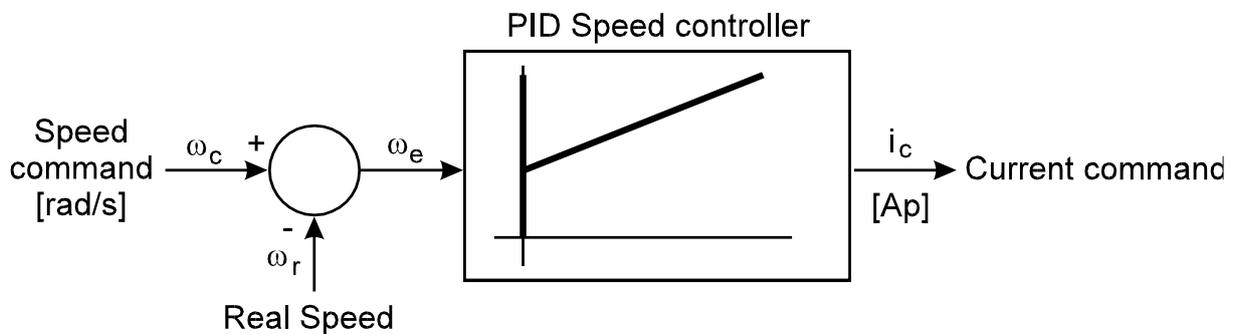

DIGITAL PID EQUATION :

$$i_c = Kp \cdot \omega_{e[N]} + Ki \cdot \sum_{i=0}^N (\omega_{e[i]} \cdot \Delta T) + Kd \frac{\omega_{e[N]} - \omega_{e[N-1]}}{\Delta T}$$

$\omega_{e[N]}$: Last sample

ΔT : Sampling time

The drive values are obtained with the following equations :

SPEED LOOP PROPORTIONAL GAIN, ADDRESS 20.

$$Kp = 4,92 \cdot 10^{-6} \cdot \hat{I}_{MAX} \cdot P_{SPEED} \quad [\hat{A}s/rad]$$

P_{SPEED} = Parameter 20

SPEED LOOP INTEGRAL GAIN, ADDRESS 21.

$$Ki = 3,73 \cdot 10^{-2} \cdot \hat{I}_{MAX} \cdot I_{SPEED} \quad [\hat{A}/rad]$$

I_{SPEED} = Parameter 21

SPEED LOOP DIFFERENTIAL GAIN, ADDRESS 22.

$$Kd = 6,5 \cdot 10^{-10} \cdot \hat{I}_{MAX} \cdot D_{SPEED} \quad [\hat{A}/(rad \cdot s)]$$

D_{SPEED} = Parameter 22

4. How to set the parameters

To set the parameters, you need the Windows User software, refer to the section 1 of chapter B.

Resume of Windows User functions for setting the parameters :

Main window :

Regulation loop icon :



Store parameter icon :



or key F2

Scope icon :



Automatic command icon :




Automatic command mode window :

Single Pulse mode button :



Single-polarity periodical mode button :

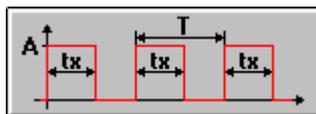

Square edge wave form button :



4.1 How to set the resolver shift angle parameter

This operation should be done when the resolver shift angle is unknown. In this case, the two following procedures are available :

4.1.1 Procedure using the motor setup tool from Windows user

- A)
Double click on the « Feedback : Resolver Motor : Brushless » button.
- B)
Click on the « Motor Setup tool » button and enable the drive.
- C)
Click on the « GO » button to find an electric zero position.
- D)
Once the position is stable, disable the drive and click on the << Store >> button to store the new resolver shift angle.

4.1.2 Procedure for manual setting

- A)
Click on the « Regulation loop » icon and click on the « M » (motor) button in the « Regulation loop » window.
- B)
Set the « Maximum motor current » to 25% of the Nominal motor current in the « Motor features » window.
- C)
Click on the « Speed command » button in the « Regulation loop » window. Then click on the « Single-polarity periodical pulse mode » button in the « Automatic command mode » window.
Enter : A = 120 rpm
 tx = 200 ms
 T = 200 ms
And click on the « Run » button.

□ D)

Click on the « Resolver » button in the « Regulation loop » window and Enable the drive.


□ E)

Search the « Resolver shift angle » range where the motor is running at 120 rpm.

The optimal value of « Resolver shift angle » is in the middle of the above mentioned range.

Functioning diagram depending of the resolver shift angle setting :

Optimal "Resolver shift angle"

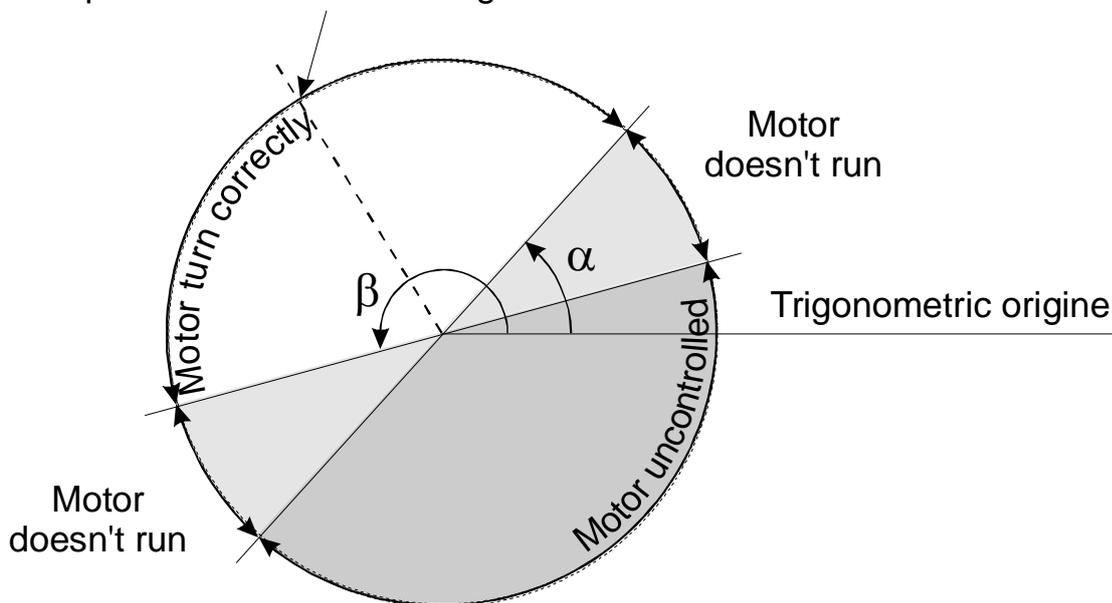

The optimal value of « Resolver shift angle » is given by :

$$\text{Optimal resolver shift angle} = \frac{\alpha + \beta}{2}$$

□ F)

Disable drive, store the optimal « Resolver shift angle » by striking F2.

4.2 How to set the current loop parameters

The procedure for the manual setting is as follows :

□ A)

Click on the « Regulation loop » icon and select the « current loop » control.

□ B)

Click on the « PID » button of the current controller and set :

- Current loop Integral gain to 0.
- Current loop Differential gain to 0.
- Phase advance to 0.
- Maximum motor current to the max. value.

□ C)

Click on the « Resolver » button and set the « Resolver Shift angle » to its optimal value added or subtracted by 90°.

□ D)

Click on the « Current Command » button. Then click on the single pulse mode button in the « Automatic command mode » window.

Enter : A = Max. peak value of the motor
 tx = 100 ms
 select the square edge wave form.

□ E)

Click on the « scope function » icon and select :


- Channel 1 : Current command (Parameter 182)
- Channel 2 : Instant current (Parameter 67)
- Suggested configuration :
 - Time scale : 1 ms/div
 - Vertical scale channel 1 and 2 : $\approx I_{DRIVE\ NOM} / \text{div}$

□ F)

Enable the drive and click on the « Run » button in the « Automatic command mode » window.

□ G)


Optimize the « Current loop Proportional Gain » (K_p). The typical value of K_p is 100.

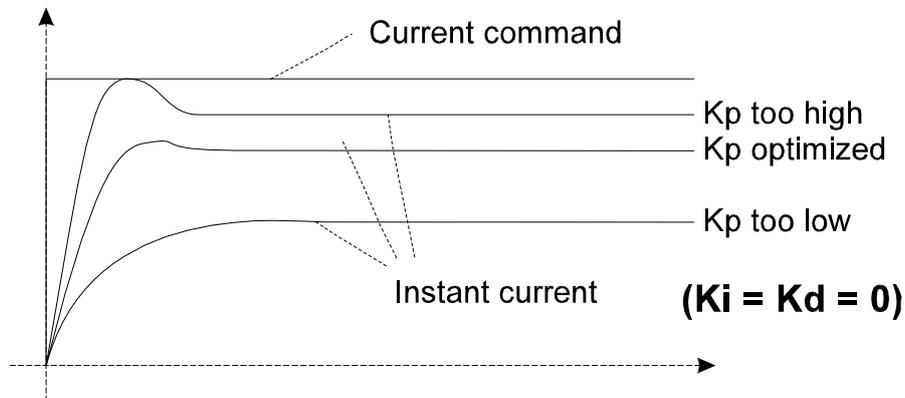

Store the optimal value of K_p by striking F2.

□ H)

Optimize the « Current loop Integral Gain » (K_i). The typical value of K_i is 5.

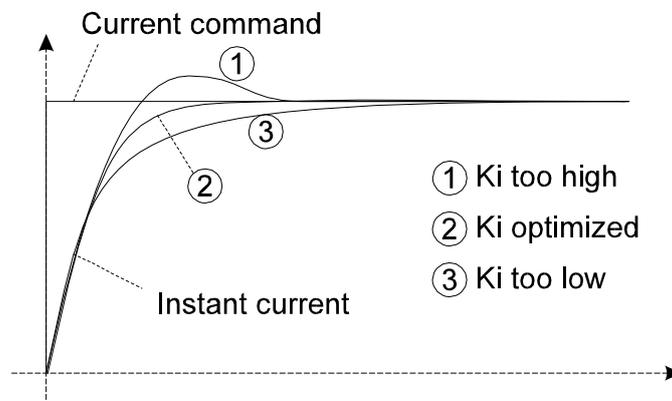

Store the optimal value of K_i by striking F2.

□ I)

The « Current loop Differential Gain » (K_d) remains in most applications at 0.

□ J)

Set the « Resolver Shift angle » again to its optimal value and store by striking F2.

4.3 How to set the speed loop parameters

The procedure is as follows :

□ A)

Click on the « Regulation loop » icon and select the « speed loop » control.

□ B)

Click on the « PID » button of the Speed controller and set :
speed loop Integral gain to 0.
speed loop Differential gain to 0.
maximum speed (for 10V input) at max motor speed

□ C)

Click on the « Speed command » button.
Then click on the « single pulse mode » button in the « Automatic command mode » window.

Enter : A = 1/5 of the application speed.
 tx = 200 ms (for example).
 select the square edge wave form.

□ D)

Click on the « scope function » icon and select :

- Channel 1 : Digital command (Parameter 50)
- Channel 2 : Instant speed (Parameter 68)
- Suggested configuration :
 - Time scale : 16 ms/div (with free running motor)
 - Vertical scale channel 1 and 2 : $\approx 1/10$ appl. speed / div

□ E)

Enable the drive and click on the « Run » button in the « Automatic command mode » window.

□ F)


Optimize the « Speed loop Proportional Gain ». The typical value is 5000. Two methods allow the setting of this gain.

□ F1)***Method without the « Scope function »***

Vary the « Speed loop Proportional Gain » around the typical value. The motor whistle and oscillate when the gain is too high. In this case, decrease the gain to obtain a good behaviour (stability) in the whole speed range. Store this optimal gain by striking F2.

□ F2)***Method with the « scope function »***

The respond at a single speed step command looks as follows (with free running motor) :

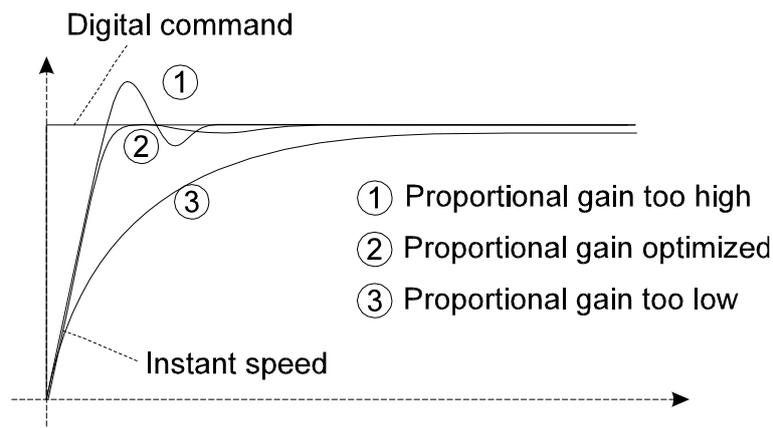

Store the optimal gain by striking F2.

□ G)

Optimize the « speed loop Integral Gain ».

The typical value is 50.

Two methods allow the setting of this gain.

□ G1)**Method without the « Scope function »**

The « Speed loop Integral Gain » is too low when the axis moves « step by step » with a small speed command. The motor axis is too smooth.


This gain is too high when the motor axis oscillates with a small speed command.

This gain is optimized when the motor axis doesn't oscillates and when the stiffness of the motor axis is sufficient to avoid its motion « step by step ».

□ G2)

Method with the « Scope function »

The respond at a single speed step command looks as follows :

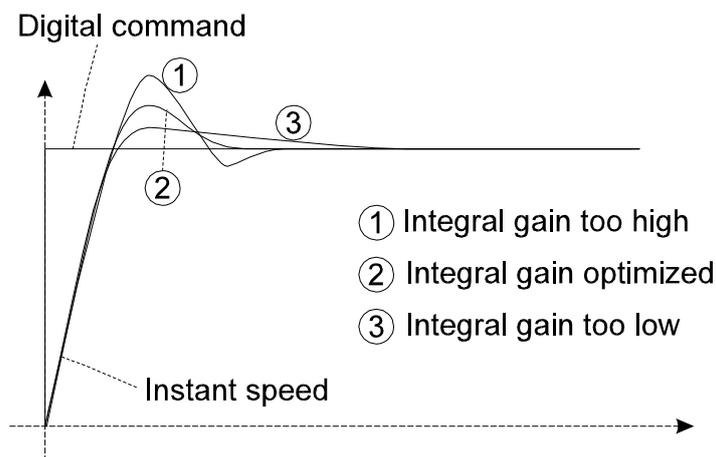

Store the optimal gain by striking F2.

□ H)

The « speed loop Differential Gain » remains in most applications at 0.

5. Trouble shooting

Display	Trouble shooting
	I ² t reached alarm. <ul style="list-style-type: none"> • Check Resolver shift angle Parameter (P1). • Check I2t motor Parameter (P5). • Check drive capacity for the application.
	Motor thermostat alarm. <ul style="list-style-type: none"> • Motor overload. • Motor thermal switch disconnected or bad connected. • Check Motor Thermostat n/o or n/c parameter (P2).
	Drive internal over temperature alarm (> 80°C). <ul style="list-style-type: none"> • Drive overloaded. • Drive cooling deficient.
	Resolver alarm. <ul style="list-style-type: none"> • Resolver wiring or link failure. • Resolver failure. • Check resolver type see section Erreur ! Source du renvoi introuvable. of chapter A.
	Power module fault (over I or over temperature). <ul style="list-style-type: none"> • Switch off and check motor, look for short circuits between motor phases.
	Over or under voltage alarm <ul style="list-style-type: none"> • Check main supply input voltage L1, L2 and L3. • FBR fuse.
	Software watchdog. <ul style="list-style-type: none"> • Check time-out, Watchdog software communication parameter (P32). • Check serial link.
appears during 1 second on display.	Over current alarm (125% of maximum drive current reached). <ul style="list-style-type: none"> • Bad regulation parameters, refer to « How to set the current loop parameters », section 4.2 of chapter D. • Check Power supply voltage, 3 x 230V for 2000 series or 3 x 400V for 4000 series.
	Over speed alarm (125% of max. motor speed reached) <ul style="list-style-type: none"> • Check Maximum speed (for 10V input) parameter (P23) value.
	Motor link fault. <ul style="list-style-type: none"> • Motor connection failure.

Display	Trouble shooting
	Parameter not OK (wrong checksum of stored parameter) <ul style="list-style-type: none"> • Check parameter and store parameters.
	Firmware not OK (only after an update of the firmware) <ul style="list-style-type: none"> • Reload firmware.
	Over braking <ul style="list-style-type: none"> • Reduce the speed • Reduce the ramp or inertia
 blinking	Hardware incompatibility. <ul style="list-style-type: none"> • The firmware is incompatible with drive hardware.

Trouble	Possible cause
Display 0 but the motor doesn't move when a speed command is applied	<ul style="list-style-type: none"> • End-limit switch enable • Max. drive current too low (P3) • Motor brake engaged
The motor jump to a position and stay blocked.	<ul style="list-style-type: none"> • Pair of motor poles parameter (P0) misadjusted. • Motor wiring on terminal U, V, W not in the correct sequence.
Motor noisy	<ul style="list-style-type: none"> • Check resolver cable • Check separation between resolver and motor cable (also inside the motor). • Check earth link • Check regulation parameters.
No link with Drive (Drive Offline appears in User software while the drive is connected to the computer).	<ul style="list-style-type: none"> • Check AXIS SELECTOR position (if present) : RS232 : Position 0 RS485 : Position 1-15 <p>The drive must be resetted to enable a change of the Axis selector position (for more information about Axis selector, see page 29).</p> <ul style="list-style-type: none"> • Check link cable. • Check Serial Port number in User software.
Firmware upgrade cannot be performed.	<ul style="list-style-type: none"> • The firmware upgrade is possible only with RS232 link. • Check RS232 link

CHAPTER E - ASYNCHRONOUS MOTOR

Drive series 2000 and 4000 are able to control asynchronous motors. To perform this, a few conditions are required :

- Firmware version must include regulation for asynchronous motor (version 2011).
- Compatible Windows user (Version 1.20 or higher) for parameters settings.
- Asynchronous motor must have a resolver or an encoder feedback.


This chapter describes only special parameters suitable to asynchronous motor. Other parameters have the same functions defined previously in this manual.

1. Change of motor and feedback type

Important :

The change of motor and feedback type is possible only with Windows user version 1.20 or higher.

A double click in the motor/feedback box included in the toolbar of the Windows user enable a Window for the selection of motor and feedback type. This Window can be also called by the « Motor type » item of the « Configuration » menu .

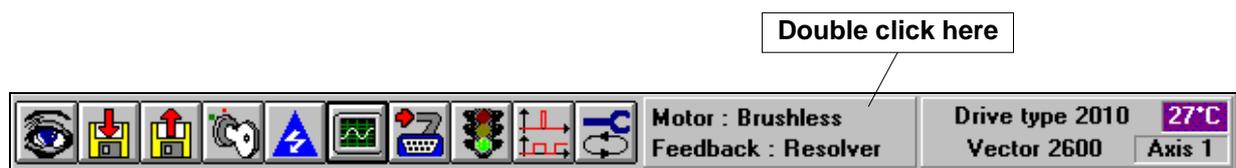

If the firmware version does not include the possibility to change motor or feedback type, the selection are automatically disabled.

When the motor or the feedback type is changed, the parameter list is also updated in accordance with selected motor and feedback .

2. Special parameters for asynchronous motors

Addr.	St.	R/W	Unit	Limits	Description
9		R/W	$\frac{100}{7FFF_h} \%$	0..15%	Slip factor
11		R/W	-	0..1	Cosinus phii
54		R/W	1/revolution	0..7FFFh	Encoder input resolution
55		R/W	0.925 RPM	8000h..7FFFh	Field weakening speed
65		R			Alarm register
	Bit		Description		Drive Display
	10	Overspeed asynchronous			

SLIP FACTOR, ADDRESS 9.

Slip factor defined the ratio :
$$\frac{\text{Speed}_{\text{synchronous}} - \text{Speed}}{\text{Speed}_{\text{synchronous}}}$$

Standard value=1..7%, usually, 4% is a good value.

COSINUS PHII, ADDRESS 11.

The cosinus phi is given from the manufacture, usually, a value between 0.8 and 0.9.

2.1 Field weakening

FIELD WEAKENING SPEED, ADDRESS 55.

If field weakening is needed, this parameter must be set to the speed value the field weakening must begin.

2.2 Asynchronous alarm



Asynchronous overspeed, set when the motor speed is higher than 133% of synchronous speed (only if field weakening is disabled).

2.3 Feedback type

Two feedback types can be used with asynchronous motor :

- Resolver
- Encoder

2.3.1 Resolver feedback

With a resolver feedback, the settings are identical as describe for brushless motors. The Resolver shift angle is ignored.

2.3.2 Encoder feedback

The encoder must be **external powered**.

The motor encoder must be wired to the encoder inputs of the XENCODER connector (see section 1.3.3 of chapter D, XENCODER wiring).

With encoder feedback, the encoder simulation is disabled, the input is directly wired on encoder output. All parameters for the configuration of encoder simulation are not used.

ENCODER INPUT RESOLUTION, ADDRESS 54.

The encoder resolution (number of pulse for one revolution) must be set in this parameter.

**These instructions have been written and checked to the best of our knowledge and belief.
However, IRT will not be liable for errors and reserves the right for changes at any time without notice.**

Index

- Adj.factor sine/cosine, 11
- Alarm, 15, 33
- Alarm latch, 13, 41
- Analogue command offset, 13, 43
- Asynchronous motor, 58
 - Alarms, 59
 - Change of feedback type, 58
 - Change of motor type, 58
 - Cosinus phi, 59
 - Encoder feedback, 60
 - Encoder resolution, 60
 - Field weakening speed, 59
 - Resolver feedback, 60
 - Slip Factor, 59
 - Special parameters, 59
- Cable
 - Connections *See Wiring*
 - Cross-sections, 20
 - Length, 20
- Command slope, 13, 44
- Current loop
 - Differential gain, 11, 46
 - Integral gain, 11, 45
 - Proportional gain, 11, 45
- Digital command, 14, 43
- Digital or Analogue command, 12, 43
- Direction stop, 12, 40
- Display
 - Alarms, 33
 - Segment value, 14, 43
 - Warnings, 33
- Encoder
 - Input configuration, 11, 39
 - Input counter, 14, 40
 - Marker pulse position, 12, 38
 - Marker pulse width, 12, 38
 - Resolution, 12, 38
- Encoder
 - Dead window, 13
- Encoder
 - Dead window, 38
- End limit switches, 12, 40
- External I-limit/Loop select, 11, 41
- I²t motor, 11, 35
- Maximum speed, 12, 36
- Monitoring Relay Rdy/Ala/Ena, 13, 41
- Motor
 - Asynchronous *See Asynchronous motor*
 - Cable, 20
 - Instantaneous current, 16
 - Instantaneous speed, 16
 - Maximum current, 11, 34
 - Maximum speed, 12, 36
 - Motor brake delay, 13, 42
 - Motor brake wiring, 30
 - Motor I²t, 11, 35
 - Nominal current, 11, 34
 - Pair of motor poles, 11, 34
 - Phases, 31
 - Revolutions counter, 14, 43
 - Thermostat, 11, 34
 - XMOTOR Wiring, 29, 30
- Parameters, 48
 - Description, 10
 - Global list, 11
 - How to set current loop parameters, 51
 - How to set Resolver shift angle, 49
 - How to set the speed loop parameters, 53
- Phase advance, 11, 46
- Resolver
 - wiring, 23
- Resolver shift angle, 11, 50
- Serial link
 - Dialogue examples, 9
 - Dialogue protocol, 8
- Slip Factor (asynchronous motor), 59
- Speed loop
 - Differential gain, 12, 47
 - Integral gain, 12, 47
 - Proportional gain, 12, 47
- Speed or Current loop control, 12
- Status, 15
- Trouble shooting, 56
- User software
 - 2000WU.EXE (Windows software), 5
- Warnings, 33
- Watchdog software, 13, 42
- Windows User, 5
- Wiring
 - Control unit, 22
 - Global plan, 21
 - XCOMMAND, 24
 - XENCODER, 25
 - XLINE, 29
 - XMOTOR, 29, 30
 - XRESOLVER, 23
 - XSERIAL 232, 26
 - XSERIAL 485, 26

DRIVE 2000/4000, OPERATING MANUAL EVOLUTION

CHAPTER	SECTION	PAGE (OLD MANUAL)	PAGE	REVISION	DESCRIPTION
		1		2	New pictures
1	1	20	20	3	New drives type
				4	New layout design

Last modification : September 2013-Rev. 4